


and no vacuum to release plunger, automatic advance starts at 850 R.P.M. (engine).

wise to retard spark until movable contacts begin to open and timing light goes out. Readjust breaker

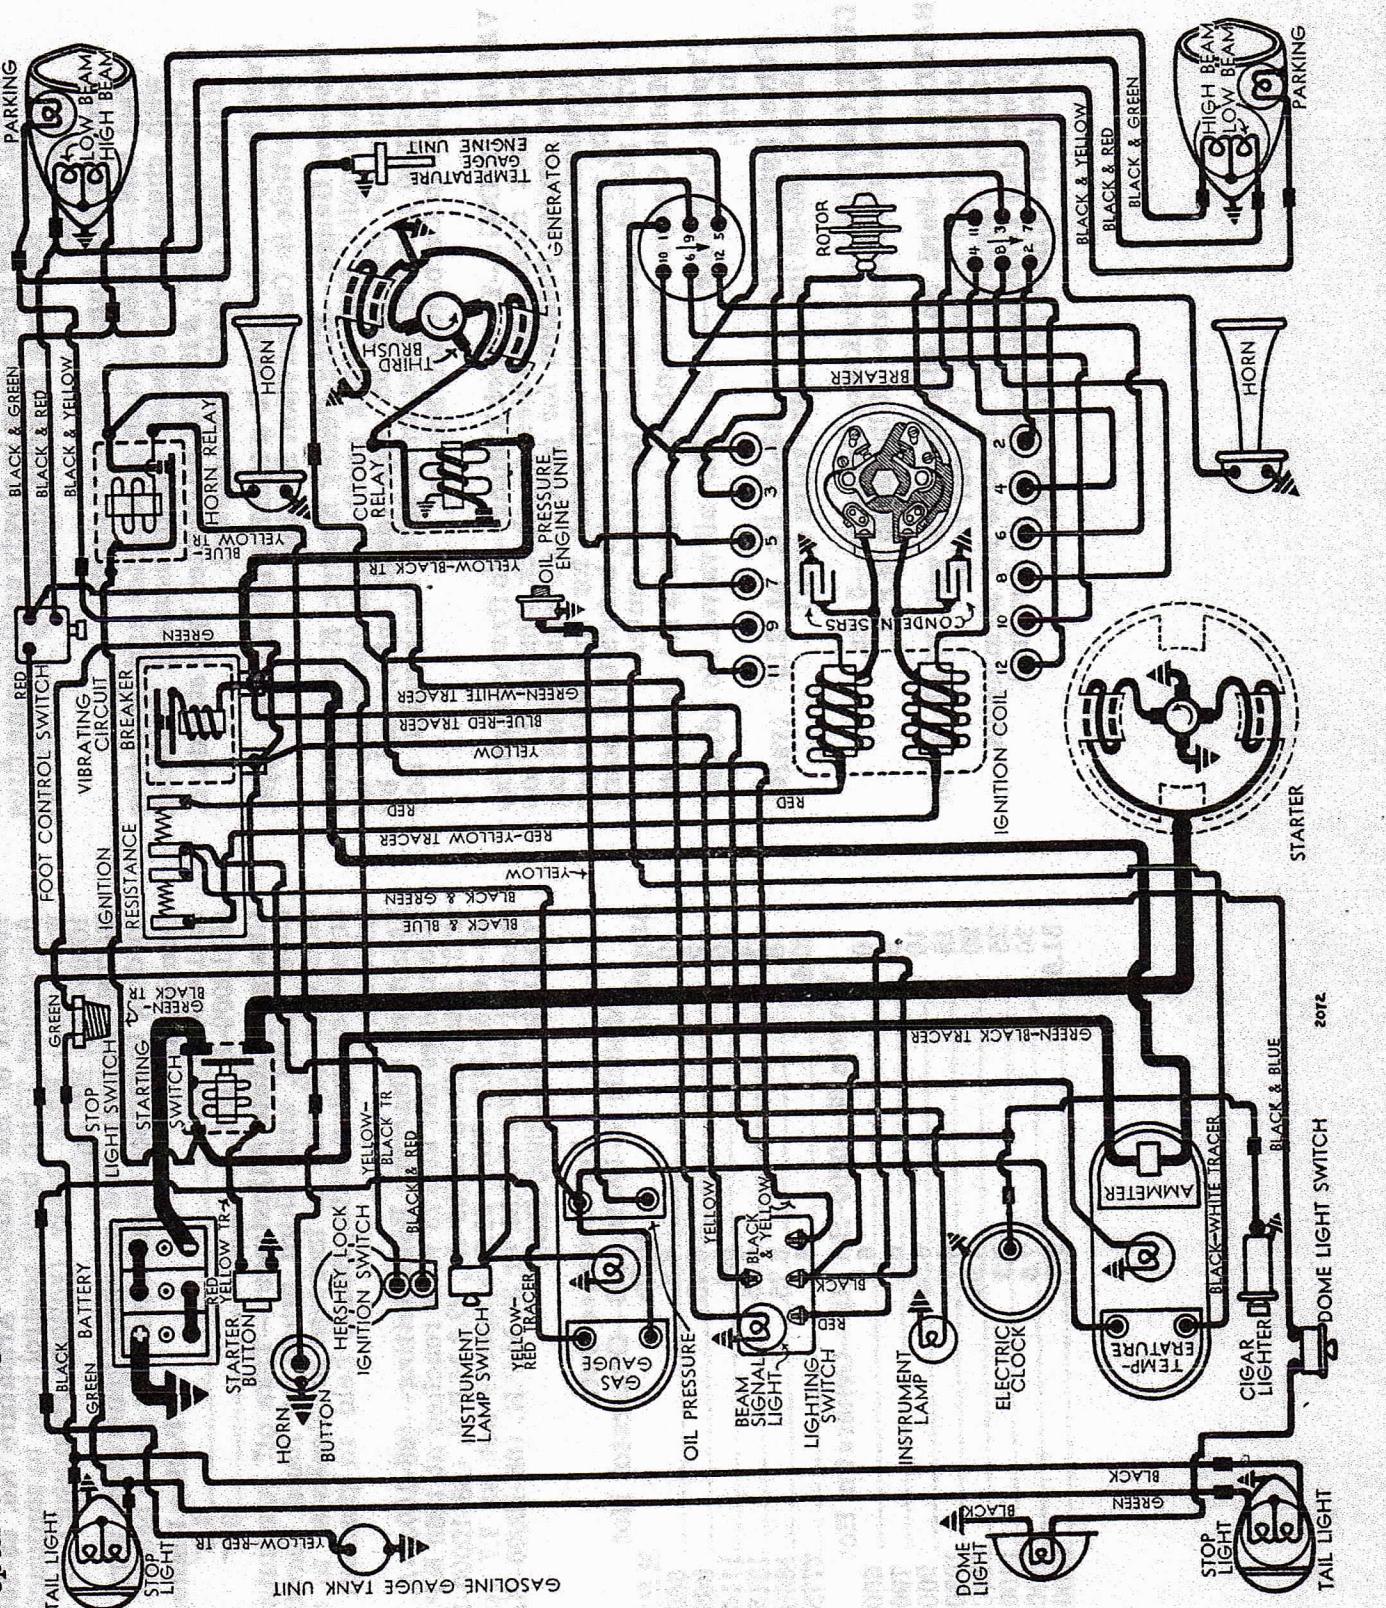

in each coupling
325-.375 ohms
co-incident
breaker, 6 lobe
with vacuum
for adjustable
spark plugs in
sets (fixed set)
in left bank.
nd 22½ degree
degree engine
between banks)
ion Timing).
). Use special
ep (.014") "Go",
3.5° open. Each
ounces. Capacity

(operative)
Engine R.P.M.
400 600 750 960 1440 1900
To remove,
3 capscrews in

Engine	R.P.M.
400	600
600	750
750	960
960	1440
1440	1900

ke Sec. below.
Piston Position
...0058" BTDC.
e synchronized
ture V-126 must
er recommends
ironization and
fied for use on
g marks on edge